


LOCKOUT/TAGOUT PROCEDURE OSHA CFR 1910.147

Developed by Reviewed by Revised by RA RA

Description: Condenser Water Pump Equipment #: CDP-1

3

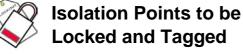


DANGER

Variable-frequency-drive capacitors often remain energized after shut-down. Discharge and wait 10 minutes prior to servicing.

Safety Is Your Responsibility!





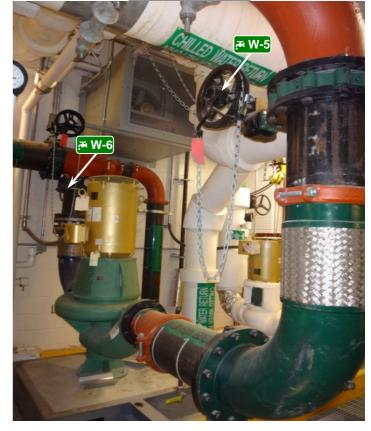

ALWAYS PERFORM A MACHINE STOP BEFORE LOCKING OUT DISCONNECTS

ID	Source	Device	Location	Method	Check
4 E-1	Electrical 480V	Padlock	Isolation point located on panel MCC-1.	Move electrical disconnect "CDP-1" to off. Lock out.	Verify machine is deenergized.
.≉ W-5	Condenser Water Suction - 40 PSI	Cable device	Isolation point on North side of unit.	Turn valve to closed position. Lock out.	Visually verify zero pressure status.
. ≭ W-6	Condenser Water Discharge - 40 PSI	Cable device	Isolation point on South side of unit.	Turn valve to closed position. Lock out.	Visually verify zero pressure status.



OPENING A GUARD DOES NOT CONSTITUTE A LOCKOUT

ALWAYS VERIFY DE-ENERGIZATION OF EXPOSED ELECTRICAL PARTS AND RESIDUAL CAPACITANCE

